

# Testing the voltage and the power as a function of the current density following an on/off profile versus time

## Accelerated ageing on/off cycling test for a PEFC single cell

Test Module PEFC SC 5-4

30 April, 2010


T Malkow, G De Marco, A Pilenga, M. Honselaar, G Tsotridis  
European Commission, Joint Research Centre, Institute for Energy, Petten

S Escribano, L Antoni  
Commissariat à l'énergie atomique et aux énergies alternatives, Grenoble

R Reißner, O Thalau  
Deutsches Zentrum für Luft- und Raumfahrt e.V., Stuttgart

E Sitters  
ECN-Fuel Cell Technology

G Heinz  
SolviCore GmbH & Co. KG

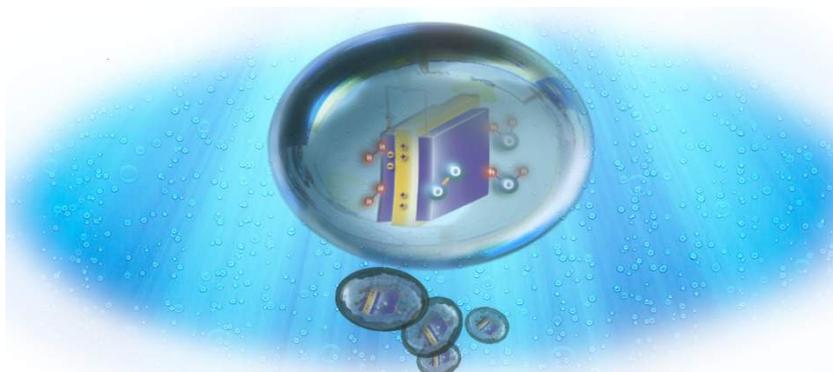

EUR xxxxx EN 2010

The mission of the JRC-IE is to provide support to Community policies related to both nuclear and non-nuclear energy in order to ensure sustainable, secure and efficient energy production, distribution and use.

European Commission  
Joint Research Centre  
Institute for Energy

**Contact information**

Address: Postbus 2, NL-1755 ZG Petten  
E-mail: [jrc-ie-info@ec.europa.eu](mailto:jrc-ie-info@ec.europa.eu)  
Tel.: +31 224 56 5656  
Fax: +31 224 56 5600

<http://ie.jrc.ec.europa.eu/>  
<http://www.jrc.ec.europa.eu/>

**Legal Notice**

Neither the European Commission nor any person acting on behalf of the Commission is responsible for the use which might be made of this publication.

*Europe Direct is a service to help you find answers  
to your questions about the European Union*

**Freephone number (\*):**

**00 800 6 7 8 9 10 11**

(\*). Certain mobile telephone operators do not allow access to 00 800 numbers or these calls may be billed.

A great deal of additional information on the European Union is available on the Internet.

It can be accessed through the Europa server <http://europa.eu/>

JRC 56063

EUR XXXXX EN

ISBN XXX-XX-XX-XXXXX-X

ISSN XXXX-XXXX

DOI XX.XXXX/XXXXX

Luxembourg: Publications Office of the European Union

© European Union, 2010

Reproduction is authorised provided the source is acknowledged

*Printed in the Netherlands*

## **Contributors**

**A Ravachol** (Commissariat à l'Energie Atomique et aux Energies Alternatives, Grenoble)





## Preface

This report is part of a series of reports on harmonised testing procedures for PEFC polymer electrolyte or proton exchange membrane fuel cell. The testing procedures called Test Modules are originally developed under the Research & Training Network (RTN) FCTESTNET (Fuel Cells Testing & Standardisation NETWORK). This project was partly funded by the 5<sup>th</sup> European Community Framework Programme on Research, Technological Development and Demonstration (FP5).

The present report contains the Test Module TM PEFC SC 5-4 entitled “Testing the voltage and the power as a function of the current density following an on/off profile versus time (Accelerated ageing on/off cycling test for a PEFC single cell)” The scope of the module is to determine the evolution of the voltage of a PEFC single cell operating in specified conditions during a durability test performed in cycling conditions with the current density following an on/off profile versus time. The module has no target application. It is a general characterization method used in research & development (R&D) of PEFC; for example, to perform baseline measurements for qualification of PEFC materials, components and designs in a given application. The module character of this testing procedure makes it suitable to apply it as a part of an entire test programme.

The present version of the module is the result of an extensive review process carried out by the participating members to work package PEFC of the FCTES<sup>QA</sup> (Fuel Cell Systems Testing, Safety & Quality Assurance) Specific Targeted REsearch Project (STREP). FCTES<sup>QA</sup> is the successor project to FCTESTNET. It is in part funded by the Sixth Framework Programme of the European Community on Research, Technological development and Demonstration activities (FP6).



**Test Module TM PEFC SC 5-4**  
Version 30 04 2010





## Table of Contents

<b>Preface</b>	<b>iii</b>
<b>FCTESTNET</b>	<b>vii</b>
<b>FCTES<sup>QA</sup></b>	<b>viii</b>
<b>Test Module PEFC SC 5-4</b>	<b>1</b>
<b>1 Objective and scope</b>	<b>3</b>
2 Terminology, definitions, and symbols	4
2.1 TERMINOLOGY AND DEFINITIONS .....	4
2.2 SYMBOLS .....	4
<b>3 Test Inputs</b>	<b>4</b>
3.1 VARIABLE TEST INPUTS .....	7
3.2 STATIC TEST INPUTS .....	8
<b>4 Test Outputs</b>	<b>9</b>
<b>5 References, required Documentation and Provisions</b>	<b>10</b>
5.1 REFERENCES.....	10
5.2 REQUIRED DOCUMENTATION .....	10
5.3 PROVISIONS .....	10
<b>6 Test Equipment and Setup</b>	<b>11</b>
6.1 TEST SET-UP.....	11
6.2 SENSORS OR CONTROL/ACQUISITION EQUIPMENT NEEDED .....	12
<b>7 Test Procedure</b>	<b>13</b>
7.1 STEP 1: PRE-CONDITIONING OF TEST OBJECT .....	13
7.2 STEP 2: SETTING THE TEST CONDITIONS (TEST INPUTS) .....	14
7.3 STEP 3: MEASURING THE TEST OUTPUTS .....	14
7.3.1 INITIAL POLARISATION CURVE .....	14
7.3.2 ON/OFF CYCLING MEASUREMENT STEP.....	14
7.3.3 FINAL POLARISATION CURVE .....	16
7.3.4 ILLUSTRATION OF THE MEASUREMENT STEPS .....	17
7.4 STEP 4: DATA POST PROCESSING.....	18
7.5 ACCEPTANCE CRITERION.....	18
<b>Appendix A. Test information for test report</b>	<b>19</b>



**Test Module TM PEFC SC 5-4**  
Version 30 04 2010





## FCTESTNET

The 55 partner strong FCTESTNET thematic network was established to define harmonised test procedures applicable to the component level (single cells, fuel cell stacks, Balance-of-Plant or BoP), sub-systems, and entire fuel cell systems. The project started in January 2003 and presented its final results in December 2005. It targeted apart from PEFC two other major types of fuel cells namely solid oxide fuel cells (SOFC) and molten carbonate fuel cells (MCFC) in stationary, transport, and portable applications.

The main objectives of FCTESTNET were to compile already existing testing procedures and methodologies and to further develop harmonised testing procedures and methodologies applicable to transport applications, stationary power sources, and portable fuel cells, focusing on:

- fuel cells,
- fuel cell stacks and
- fuel cell systems.

The main deliverables of the network were:

- Contribution to the FC glossary EUR 2295 EN
- Mapping of testing competencies and inventory of equipment around Europe;
- Compilation and further development of methodologies for testing procedures;
- Common measuring criteria;
- Agreement on and harmonisation of approaches;
- Release of testing procedures
- Establishing links between European, US and Japanese standardisation bodies in the frame of harmonising test procedures.

FCTESTNET had not a mandate to establish formal standards for fuel cell test procedures. Instead FCTESTNET strived to provide harmonisation of application and technology oriented to ensure the support and integration of European industrial interests. The idea was to start from an analysis of fuel cell applications to define test parameters, test methods and conditions that are relevant for testing of single cells, stacks, sub-systems, and systems. The project output is considered useful input for standard setting bodies, but also for definition of *ad-hoc* test procedures applied by R&D organisations and industry.


In fact various fuel cell test procedures were developed and compiled individually as Test Modules. These modules are accessible at the FCTES<sup>QA</sup> website.

## FCTES<sup>QA</sup>

Started in May 2006, the FCTES<sup>QA</sup> project addresses pre-normative research, benchmarking, and experimental validation through Round Robin Testing of harmonised, industry wide test protocols and testing methodologies for three types of fuel cells: PEFC, SOFC, and MCFC in stationary applications. The main objective of the project is the validation and benchmarking - by means of experimental campaigns – of the results of FCTESTNET testing procedures for three different levels (single cells, fuel cell stacks, and entire systems). The Round Robin Testing campaigns of FCTES<sup>QA</sup> are carried out by world class laboratories from among the 27 European project participants and participants from China, Japan, Korea, and US.

The results of this four years project are discussed debated and agreed in cooperative progress meetings and dedicated international workshops under the auspices of the International Partnership for the Hydrogen Economy (IPHE) and the International Energy Agency (IEA). The outcome of FCTES<sup>QA</sup> will support to lessen the gap between individual and independent management decision making within companies and research groups as far as fuel cells are concerned following accepted international quality practices.

The flow chart below describes the methodology used to improve/validate the original FCTESTNET procedures up to the final release of the procedures. The same validation methodology has been considered for all the 3 technologies and for testing of fuel cells, fuel cell stacks and fuel cell systems.

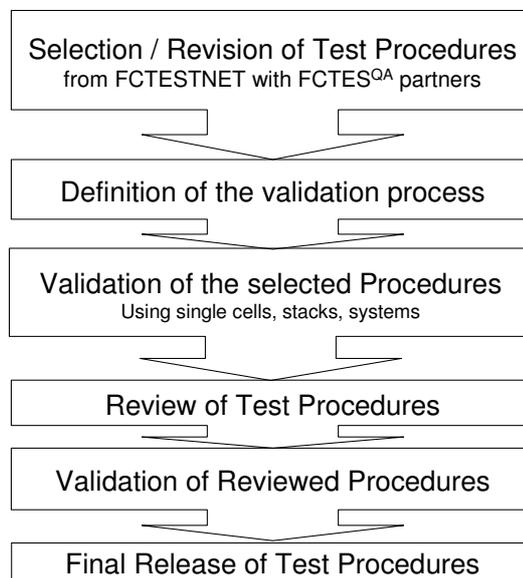

The test procedures can be downloaded from the website and will feed into the appropriate standardization platforms for further consensus building and international approval (like IEC TC 105).



**FCTES<sup>QA</sup>**

**Fuel Cell Testing, Safety and Quality  
Assurance**

Programme: ENERGY 3 -Sustainable Energy Systems

**Test Module PEFC SC 5-4**

**Testing the voltage and the power  
as a function of the current density  
following an on/off profile versus time**

**Accelerated ageing on/off cycling  
test for a PEFC single cell**

Version 30-04-2010



**Test Module TM PEFC SC 5-4**  
Version 30 04 2010



## 1 Objective and scope

The objective is to determine the evolution of the voltage of a PEFC single cell operating in specified conditions during a durability test performed in cycling conditions with the current density following an on/off profile versus time.

Since several applications are interested in the ageing behaviour of PEFC components, the test module has no specific scope and aims to qualify the generic performance of a polymer electrolyte fuel cell single cell submitted to an accelerated on/off ageing test.

It can either be used as a general method to characterize PEFC components such as MEAs or sub-components of MEAs for research and development objectives or as a specific test to qualify the life time of PEFC components for a specific application with adapted operating conditions

*Note: the ranges of the operating conditions considered for this test module correspond to the current conditions generally used in the field of PEFC testing.*

**Most important, the parameters, values and range of values including uncertainties and control accuracies used throughout this document are recommended only.**

## 2 Terminology, definitions, and symbols

### 2.1 Terminology and definitions

Terminology and definitions used in this document correspond to the European 5<sup>th</sup> FCTESTNET terminology document EUR 22295 EN (see Section 5.1).

### 2.2 Symbols

Symbols used in this document are defined as follows:

Table 1: Definition of symbols used.

Symbol	Description
$A$	Common active geometric area of the fuel cell
$F$	Faraday's constant ( $F = 96485.3$ C/mol)
$I$	Electrical fuel cell current
$I_{max}$	Maximum electrical fuel cell current
$M$	Molar mass
$P$	Electrical fuel cell power
$P_k$	Electrical fuel cell power related to interval $k$
$Q_{cool}$	Flow rate of the fuel cell coolant
$Q_v$	Volumetric flow rate
$Q_{v, \lambda}$	Volumetric flow rate (dry basis) of a reactant gas at stoichiometry $\lambda$ under STP <sup>1</sup> conditions
$Q_{v, x}$	Volumetric flow rate of fuel cell fluid $x$ (i.e. dry reactant gas, fuel gas= <i>fuel</i> or oxidant gas= <i>ox</i> ) under STP conditions
$Q_{v, x, \lambda}$	Volumetric flow rate (dry basis) of reactant gas $x$ at stoichiometry $\lambda$ under STP conditions
$Q_{v, x, min}$	Minimum volumetric flow rate of fuel cell fluid $x$
$RH_{x, y}$	Relative humidity of reactant gas $x$ at fuel cell location $y$ (i.e. inlet=in or outlet=out)
$T$	Temperature
$T_{x, y}$	Temperature of fuel cell fluid $x$ at fuel cell location $y$ (i.e. inlet=in or outlet=out)
$T_A$	Ambient temperature
$T_{dew, x, y}$	Dew point temperature of reactant gas $x$ at fuel cell location $y$ (i.e. inlet=in or outlet=out)
$T_c$	Fuel cell temperature
$V$	Fuel cell voltage
$X_{O_2}$	Oxygen content in oxidant gas (molar fraction)
$X_{H_2}$	Hydrogen content in fuel gas (molar fraction)
$i$	Fuel cell current density ( $i = I / A$ )
$k$	Interval $k$ belonging to current density set point $k$ during the measurement of the test outputs
$l$	Data acquisition index or number of data points recorded during $t_{acq}$

Symbol	Description
$m$	Total number of data points per interval $k$
$\dot{n}$	Molar flow rate
$p_A$	Ambient pressure (absolute)
$p_{x,y}$	Pressure (gauge) of reactant gas $x$ at fuel cell location $y$ (i.e. inlet=in or outlet=out)
$t$	Duration, period, or time
$t_{acq}$	Duration of data acquisition at interval $k$
$t_{dwell}$	Minimum dwell time between two current density set points belonging respectively to interval $k$ and $k+1$
$t_{eq}$	Duration at the start of interval $k$ to allow the test inputs and outputs to attain quasi-steady state upon the load change and where necessary, to account for load ramping and adjustments of the reactant flow rates by the test bench
$t_k$	Time elapsed for measuring the test outputs at the beginning of interval $k$
$t_{k,l}$	Time elapsed for measuring the test outputs to acquire $l$ data points number at interval $k$
$t_{offs}$	Duration between end of data acquisition at interval $k$ and start of data acquisition at interval $k+1$ to account, when necessary, for delays in data acquisition by the test bench
$t_{smp}$	Duration for sampling at interval $k$
$t_{stab}$	Duration for the stability check of the test inputs and outputs according to their defined criteria at interval $k$ prior to data acquisition
$z$	Number of electrons exchanged in the fuel cell reaction for one mole of reactant
<b>Greek symbols</b>	
$\lambda_x$	Stoichiometric ratio of the flow rate of reactant gas $x$ supplied to the fuel cell to that theoretically required to sustain the fuel cell electrical current or electrical load applied
$\varphi_{H_2}$	Volumetric hydrogen content of dry fuel gas
$\varphi_{O_2}$	Volumetric oxygen content of dry oxidant gas
$\rho$	Density (i.e. dry reactant gas under STP conditions)

<sup>1</sup> SATP = Standard Ambient Temperature and Pressure (298.15 K, 100 kPa or 1 bara)  
STP = Standard Temperature and Pressure (273.15 K, 101.325 kPa).

The volumetric flow rates of the reactant gases can be calculated as follows:

$$Q_{v,\lambda} (l/sec) = \frac{M (g/mol) \cdot I(A) \cdot \lambda}{z \cdot F (C/mol) \cdot \rho (kg/m^3) \cdot \varphi} \quad (\text{Equation 1})$$

Note:  $F = 96485.3 \text{ C/mol}$ .

Table 2: Properties of reactant gases for calculating the volumetric flow rate,  $Q_{v,\lambda}$  of the reactant gases.

Reactant gas	$M$	$z$	$\rho$
	[g/mol]		[kg/Nm <sup>3</sup> ]
H <sub>2</sub>	2.02	2	0.0898
O <sub>2</sub>	32.0	4	1.429
Air	28.8	4	1.292

Using these values at STP (273.15K, 101.325kPa), the reactant gas flow rates can be calculated using the expressions given in Table 3.

Table 3: Expressions for calculating the volumetric flow rate,  $Q_{v,\lambda}$  of the reactant gases based on Eq. 1 and the data of Table 2.

Reactant gas	$Q_{v,\lambda}$ [Nml/min]
H <sub>2</sub>	$6.97 \cdot I(A) \cdot \lambda$
O <sub>2</sub>	$3.35 \cdot I(A) \cdot \lambda$
Air	$3.35 / 0.209 \cdot I(A) \cdot \lambda =$ $16.59 \cdot I(A) \cdot \lambda$

Note: The reactant flow rates calculated using the expressions provided for in Table 3. represent the actual flow rates applicable to measuring the test outputs. Other values may be used for the Fuel Cell start-up and shut-down procedure as to the Fuel Cell manufacturer recommendation or the common practice at the testing organisation. The unit Nml/min reflects the volume flow under STP. In case of using Mass Flow Controllers (MFC) to feed reactant gases to the Fuel Cell it is recommended to check whether the MFC is calibrated to the same reference temperature and pressure like used in this calculation.

### 3 Test Inputs

In tables below are listed all the test inputs (operating conditions) that must be controlled in this testing procedure.

Concerning the control accuracy, the measurement uncertainties and the sample rates, the values given in the following tables are the values commonly available with most of the equipments in the middle of the ranges but they can be too difficult to get in the extremities of the ranges or with particular operating conditions. The most important is to clearly give the actual values in the test report when these values differ from what is required by the test module.

#### 3.1 Variable Test Inputs

Among the following inputs,  $T_{\text{cell}}$  should be variable only during the start-up and the conditioning steps. The other inputs are variable during the load on/off profile step.

Table 4: Variable test inputs during test step 3.

Input	Value / Range	Control accuracy	Sample rate
$t$	0 – 5,000 h	NA	-
$i$	0 – 2 A/cm <sup>2</sup>	± 2% FS for $i < 0.1\text{A/cm}^2$ ± 1% FS for $i > 0.1\text{A/cm}^2$	≥ 1 Hz
$i$	0 (during “off” phase) $0,8 > i_{\text{load}} > 0,5\text{ A/cm}^2$ (during “on” phase)	± 2% FS for $i < 0.1\text{A/cm}^2$ ± 1% FS for $i > 0.1\text{A/cm}^2$	≥ 1 Hz
$T_c$	$T_A \pm 80\text{ }^\circ\text{C}$	± 2 °C	≥ 1 Hz
$Q_{v, \text{fuel}}^{**}$	Corresponding to the fuel stoichiometry, see Eq. 1	± 1% FS*	≥ 1 Hz
$Q_{v, \text{ox}}^{**}$	Corresponding to the oxidant stoichiometry, see Eq. 1	± 1% FS*	≥ 1 Hz

\* Note 1: usually the digital mass flow meters used on the test benches are provided with an accuracy level of 1% of the Full Scale (maximum flow) and with a minimum measurable flow (generally 10% of the maximum flow). That means that the measurement uncertainty decreases with the flow rate and so decreases while increasing the current density when operating at fixed stoichiometry. In order to guarantee sufficient precision the digital mass flow meter should be selected in such a way that its maximum flow does not exceed by more than 100%  $Q_{v, \lambda}$  at the maximum desirable current density.

\*\* Note 2:  $Q_{v, \lambda_{\text{fuel}}}$  and  $Q_{v, \lambda_{\text{ox}}}$  are respectively the stoichiometry controlled volumetric flow rates of fuel and oxidant unless these values are smaller than the minimum flow rates:  $Q_{v, \text{fuel}, \text{min}}$  and  $Q_{v, \text{ox}, \text{min}}$ . These minimum values may correspond to the stoichiometric flow rates for a low current density comprised between 0.05 and 0.2 A/cm<sup>2</sup>. The actual minimal current density will have to be clearly given in the test report with the related fuel and oxidant flow rates and stoichiometries.

### 3.2 Static Test Inputs

The following inputs should be static and fixed at one single value in the given ranges during all the steady measurement steps.

Table 5: Static test inputs

Input	Range/Value	Control accuracy	Sample rate
$X_{H_2}$	$H_2^*$	+0/-0.001% $H_2$	-
$X_{O_2}$	air or pure $O_2^{**}$	$\pm 1\%$ $O_2$	-
$P_{ox}^{***}$	ambient to 300 kPa	$\pm 2\%$	1 Hz
$P_{fuel}^{***}$	ambient to 300 kPa	$\pm 2\%$	1 Hz
$RH_{ox}$	0 - 100 %****	$\pm 5\%$ FS	$\geq 1$ Hz
$RH_{fuel}$	0 - 100 %****	$\pm 5\%$ FS	$\geq 1$ Hz
$\lambda_{ox}$	2 - 3 (dimensionless)	-	-
$\lambda_{fuel}$	1.1 - 2 (dimensionless)	-	-
$T_c$	$T_{amb.} - 80$ °C	$\pm 2^\circ C$	1 Hz

\* Note 1: to be defined (composition)

\*\* Note 2: to be defined in the test report (laboratory or synthetic air with its composition (RH, particle size and composition for instance))

\*\*\* Note 3: please state in the test report which option was selected, whether the cell inlet pressure or the cell outlet pressure is controlled to be constant.

\*\*\*\* Note 4: The method to humidify the reactants is not imposed by the test module. However, they have to be described in the test report as the corresponding inputs (for example the temperatures of the water and of the lines in the case of bubblers or the water flow rates in the case of injectors) – The dew points corresponding to the relative humidity of the gases should also be given in the test report (calculated or measured if humidity sensors are available at the gases inlets).

## 4 Test Outputs

Table 6 below lists the test outputs that are determined in the application of this test module.

Table 6: Test outputs determined in this test module.

Output	Measurement uncertainty	Sample rate
$P^*$	Calculated	-
$V$	$\pm 0.5\%$ FS	$\geq 1$ Hz

\* Note 1: The cell power density can also be calculated ( $W/cm^2$ ).

## 5 References, required Documentation and Provisions

### 5.1 References

1. FCTESTNET Fuel Cells Glossary, EUR Report 22295 EN, Scientific and Technical Research Series, Office for Official Publications of the European Communities, Luxembourg, ISBN 92-79-02747-6, 2006.
2. Polarisation curve method (Test Module TM PEFC SC 5-2) and related specific test report template: FCTESQA\_TR\_TM\_PEFC\_SC\_5-2\_2010-05.doc - This test module describes the testing procedure to study the voltage of a single cell as a function of the current density and the test report template describes how to report all the needed information when this procedure has been applied.
3. IEC 62282-2 Ed.1: Fuel cell technologies – Part 2: Fuel cell modules.
4. The specific test report template: FCTESQA\_TR\_TM\_PEFC\_SC\_5-4\_2010-05.doc - This test report template describes how to report all the needed information when this procedure has been applied.

### 5.2 Required documentation

The following are required:

1. Documentation (including installation and safety instructions) provided by the fuel cell test bench manufacturer or component manufacturers for a self-assembled test bench.
2. Calibration certificates of the fuel cell test bench instrumentation. These documents will be necessary to determine the actual uncertainty of the measurements of the test inputs and outputs and to check whether the requirements of this test module are met.
3. Test object or components documentation provided by the manufacturers including start-up, conditioning and shut-down procedures.
4. Safety instructions for the fuel cell.

### 5.3 Provisions

Standard local safety precautions for working with the fuels and oxidants used shall be followed.


## 6 Test Equipment and Setup

This test procedure does not prescribe the type, geometry and size of the single cell. Materials, design, geometry and sizes of the MEA, monopolar plates and cell will have to be described in the test report (Cf. Appendix A).

The performance measurement will need at least the test set-up and the sensors described or listed below in order to apply and measure the test inputs and outputs listed in sections 3 and 4.

### 6.1 Test set-up

The fuel cell test facility comprises sub-systems to provide fuel and oxidant to the cell in defined manner (flow rate, pressure, temperature, humidity), an electronic load for dissipating the delivered electrical energy of the cell, and a heating (possible heating/coolant) sub-system for controlling cell temperature. The facility is controlled by a computer, which also acts as data acquisition unit. A schematic of a typical fuel cell test environment is shown in Figure 6.1.

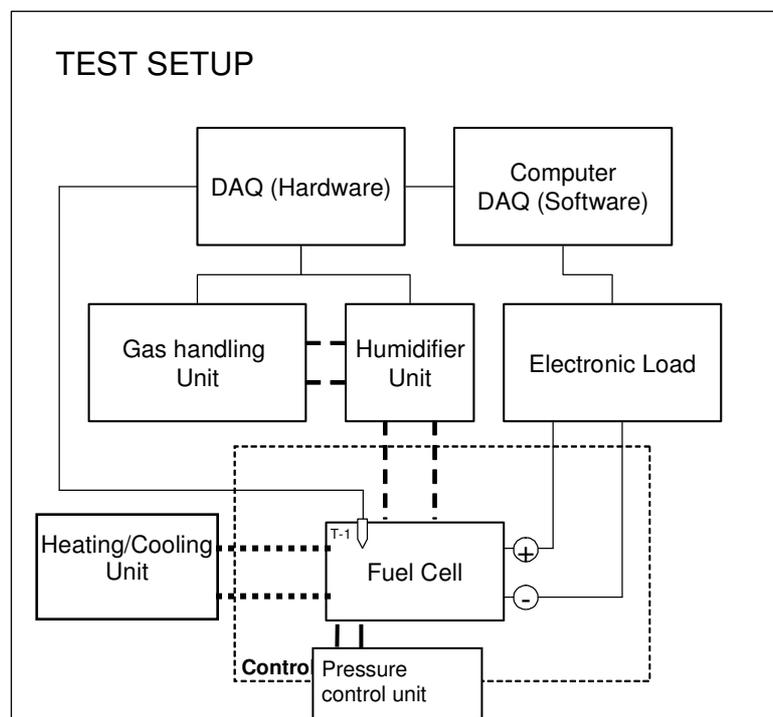

**Figure 6.1: typical fuel cell test environment.**

## 6.2 Sensors or control/acquisition equipment needed

The needed test facility equipments are described in the following Table with the main specifications:

Table 7: Test equipments and instruments

Description	Specifications	Qty
Oxidant Gas back pressure sensor	Pressure ambient to 500 kPa for the considered range of Oxidant flow rates	1
Fuel Gas back pressure sensor	Pressure ambient to 500 kPa for the considered range of Fuel flow rates	1
Oxidant Gas flow meter	Flow rates for the considered range of current	1
Fuel Gas flow meter	Flow rates for the considered range of current	1
Oxidant Gas humidification device *	Temperature 25 to 90 °C, RH 0 to 100 %	1*
Fuel Gas humidification device *	Temperature 25 to 90 °C, RH 0 to 100 %	1*
Cell Temperature sensor **	Temperature ambient to 100 °C	1 minimum
Cell heating/cooling devices	Temperature ambient to 100 °C	1 minimum
Electronic Load	Max current reachable at $1.2 > U > 0$ V - Possible galvanostatic mode	1
Control and measurement device (DAQ hardware and software and computer)	The capacity of the data acquisition system has to be sufficient to record all test variables with the sample rates defined	1

\* Note 1: one device includes sensors and equipment adapted to the temperature and relative humidity ranges specified. For example: bubblers + heated lines equipped with temperature sensors or water flow meters in case of water injection.

\*\* Note 2: The sensor for measuring the cell temperature (Type K thermocouples are recommended) should be located as close as possible to the MEA, at least in contact with the current collectors in contact with the electrodes.

## 7 Test Procedure

*Note: Deviations from the following recommended procedure shall be described in the test report.*

The most important factor, regardless of conditioning procedure, is that the cell voltage be stable before the actual measurement step starts. A stability criterion can be defined based on the deviation of the fuel cell voltage measured over a fixed period of time. It is recommended that the variations in the cell voltage be lower than  $\pm 5$  mV during the last hour before ending the conditioning step.

### 7.1 Step 1: Pre-conditioning of test object

The start-up of the fuel cell and conditioning step can be performed following one of these procedures:

- proposed by the manufacturer of the test object,
- proposed by the manufacturer of a fuel cell component,
- the one that is common practice at the testing organisation, or
- as recommended below (based on galvanostatic mode).

The test starts by bringing the operating conditions (inputs) to the values specified for the conditioning of the cell. The conditioning consists in keeping the previous conditions stable until the cell voltage reaches a stable value (normally corresponding to an optimized humidified state of the MEA electrolyte).

The stabilisation of the conditions for the conditioning of the cell can be part of the start-up procedure. If this is not the case it is recommended to operate the cell in galvanostatic mode at the selected operating temperature and at the gas conditions of the paragraph 7.2, by increasing the current density by steps of  $0.1 \text{ A/cm}^2$  while keeping the cell voltage higher than  $0.5 \text{ V}$  until reaching the current density identified for the conditioning. The current density for the conditioning of the cell will correspond either to the maximum current reachable at  $0.5 \text{ V}$  in the selected conditions or to a current density specified by the specific objective of the test.

The conditioning step has to last at least 24h with a cell voltage variation of less than  $\pm 5$  mV in the last hour before starting the test.

*Note: this stability criterion can be reduced for specific conditions, depending on the test objective, especially at high current densities where fluctuations of the cell voltage might be observed. However it should be verified that the average cell voltage (averaged over 5 min) varies less than  $\pm 5$  mV in the last hour before starting the test.*

Applied conditions and procedure for start-up, stabilisation and conditioning should be described in the test report (Cf. Appendix A).

## 7.2 Step 2: Setting the test conditions (test inputs)

The test is under galvanostatic control with a load profile at fixed operating temperature and gas conditions.

This step starts by setting the current density to  $i_{load}$  (corresponding to the "on" phase of the cycle) and then the operating conditions to the values specified for the voltage measurement versus time (selected within the ranges specified) when these values are not already corresponding to the conditioning step or to the previous step in a test program.

A first value of the cell voltage at  $i_{load}$  is measured when the operating conditions have all reached a stable value. The conclusion of the test referring to the qualification of the single cell tested will partially be based on this initial value.

## 7.3 Step 3: Measuring the test outputs

During the test the static test inputs (temperatures, relative humidity and pressures) are to be kept at the values selected within the ranges and with the accuracy specified.

All the functional inputs and outputs are measured versus time.

### 7.3.1 Initial polarisation curve

A initial polarisation curve has to be performed as described in the test module TM PEFC SC 5-2 before starting the on/off cycling measurement step.

**Ending criteria:** as described in TM PEFC SC 5-2, the polarisation curve will be stopped when the maximum current density is reached or if the cell voltage goes below 0.3 V (in order to avoid a non reversible damage of the cell components).

Note: other characterizations using electrochemical methods like voltammetry and electrochemical impedance spectroscopy can be applied before the cycling step in order to help understanding the performance evolution

### 7.3.2 On/off cycling measurement step

The main objective is to determine the evolution of both open circuit voltage and voltage on load in terms of V/hours when submitting the single cell to a specific load profile including "on" and "off" phases of 15 minutes.

After the initial polarisation curve, the current density is fixed again at  $i_{load}$  for a first "on" phase of 15 minutes.

Then the cycling will follow the following profile:

- "off" phase = 15 minutes at 0 A/cm<sup>2</sup>
- "on" phase = 15 minutes at  $i_{load}$  A/cm<sup>2</sup>:

it is recommended to increase the current density step by step in order to avoid important voltage drop. The current has to be increased from 0 to  $i_{load}$  in four steps of 10 seconds increasing the current of  $i_{load}/4$  at each step:

1.  $\frac{1}{4} i_{load}$  A/cm<sup>2</sup> during 10 s
2.  $\frac{1}{2} i_{load}$  A/cm<sup>2</sup> during 10 s
3.  $\frac{3}{4} i_{load}$  A/cm<sup>2</sup> during 10 s
4.  $i_{load}$  A/cm<sup>2</sup> during 14 min 30 s

During the two phases, the flow rates have to be controlled as follow:

- "on" phase:  $Q_{fuel} = Q_{\lambda fuel}$  and  $Q_{ox} = Q_{\lambda ox}$
- "off" phase:  $Q_{fuel} = Q_{fuel, min, OCV}$  and  $Q_{ox} = Q_{ox, min, OCV}$

Where:  $Q_{fuel, min, OCV}$  and  $Q_{ox, min, OCV}$  correspond to the smallest amounts of gas necessary to maintain the pressures  $p_{fuel}$  and  $p_{ox}$  during the "off" phases. These values should be lower than the  $Q_{fuel, min}$  and  $Q_{ox, min}$  defined in the inputs table and which correspond to the minima when the cell is not at OCV.

The duration of this step depends on the specific objective of the test and on the related specific "ending" criterion: fixed life time test or fixed performance losses (considering the power, the voltage on load or the Open Circuit Voltage).

*Note: if the test module is used to characterize components life time, it is recommended to apply the test module on several identical cells for different fixed durations in order to analyse the components at different stages of ageing.*

**End of test criterion:** apart from the different possible ending criteria specifically defined, the test has to be stopped (gases, temperatures and load off) if the cell voltage goes below a pre-defined minimum voltage. It is recommended to use a minimum voltage of 0.5 V if the components under investigation should be used for further testing; for research purposes e.g. qualifying the life time and investigating the degradation processes a minimum voltage of 0.3 V is recommended to avoid irreversible damage of the cell components.

### 7.3.3 *Final polarisation curve*

A final polarisation curve has to be performed as described in the test module TM PEFC SC 5-2 after the end of the on/off cycling measurement step, unless the performance loss or the components degradation (like membrane failure) does not allow it.

As for the initial polarisation curve, the final curve have to be started after an "on" phase at  $i_{load}$ .


The comparison of the final polarisation curve with the initial one will be used to qualify the performance loss of the cell on the entire range of current density in order to analyse the causes of degradation.

**Ending criteria:** as described in TM PEFC SC 5-2, the polarisation curve will be stopped when the maximum current density is reached or if the cell voltage goes below 0.3 V (in order to avoid a non reversible damage of the cell components).

*Note: other characterizations using electrochemical methods like voltammetry and electrochemical impedance spectroscopy can be applied after the end of the cycling step in order to help understanding the performance evolution.*

### 7.3.4 Illustration of the measurement steps

The schematics below describe the evolution of the variable inputs and of the voltage from the start-up and conditioning steps to the beginning of the on/off cycling measurement step.

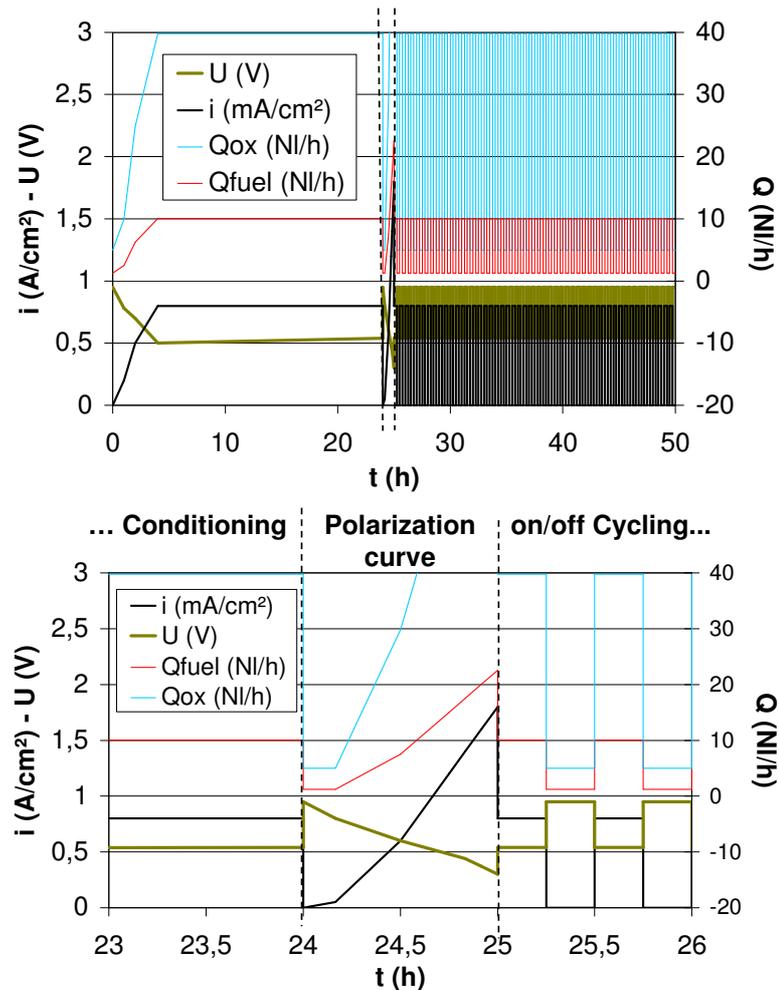

**Figure 7.1: description of a on/off cycling accelerated ageing test (up: including start-up) and (down: detail with the end of the conditioning and the beginning of the cycling) where**

- $i_{load} = 0.8 \text{ A/cm}^2$
- $\lambda_{fuel} / \lambda_{ox} = 1.2 / 2$
- $Q_{fuel, min, OCV} = Q_{\lambda_{fuel}}$  and  $Q_{ox, min, OCV} = Q_{\lambda_{ox}}$  for  $i = 0.1 \text{ A/cm}^2$

#### 7.4 Step 4: Data Post Processing

The evolution of the voltage over time is the main output of this test.

*Note: If the test station does not allow for on-line data processing the amount of data registered at a sampling rate of 1Hz might be too much for post-processing. If a sampling rate lower than 1Hz during the long term measurements should be necessary make sure that at least during the polarisation curve the sampling rate of 1 Hz should be respected. It is also recommended to use a higher sampling rate just before and after the polarisation curves in order to clearly identify their effect on performance. Actual data sampling rates should be given in the test report.*

The power density [ $P \text{ (W/cm}^2\text{)} = V \text{ (V)} \cdot i \text{ (A/cm}^2\text{)}$ ] should be calculated as a further output for this test and can be calculated for all the measurement steps (polarisation curves and "on" phases).

The voltage deviations  $\Delta V$  will have to be calculated at OCV and on load over the complete duration of the cycling measurement step in order to evaluate a "performance progression rate" (normally a performance "degradation rate")  $\Delta V_{OCV}/dt$  and  $\Delta V_{i_{load}}/dt$ :

- $\Delta V_{OCV} = OCV_{\text{of the first "off" phase}} - OCV_{\text{of the last "off" phase}}$
- $\Delta V_{i_{load}} = V_{\text{at } i_{load} \text{ of the first "on" phase}} - V_{\text{at } i_{load} \text{ of the last "on" phase}}$

The performance loss will be calculated in % at  $i_{load}$  as follow:

- $[V_{\text{at } i_{load} \text{ of the first "on" phase}} - V_{\text{at } i_{load} \text{ of the last "on" phase}}] / V_{\text{at } i_{load} \text{ of the first "on" phase}}$
- $[P_{\text{at } i_{load} \text{ of the first "on" phase}} - P_{\text{at } i_{load} \text{ of the last "on" phase}}] / P_{\text{at } i_{load} \text{ of the first "on" phase}}$

The performance losses should be calculated in the same way for the whole range of current density by using the final and initial polarisation curves.

#### 7.5 Acceptance Criterion

To be specified by the user of this test module.

Since the test module is to be used as a durability test, the acceptance criteria could be defined either as a maximum acceptable power loss over a fixed period or as a maximum acceptable voltage loss rate.



## **Appendix A. Test information for test report**

It is strongly recommended to use for test reporting, the specific test report template related to this procedure:

PEFC Single Cell Test Report. On/off load cycling test report.

File: FCTESQA\_TR\_TM\_PEFC\_SC5-4\_2010-05.doc



## Document Information

Version	Change	Date	Status	Text / revision by
30 04 2010	Initial release	30-04-2010	original	FCTesQA PEFC team

## **Acknowledgements**

This report is part of the efforts made by and the result of the support of many individuals and organisations from the participating members of FCTESTNET and FCTES<sup>QA</sup>.

The editors of this report together with the Ente per le Nuove tecnologie, l'Energia e l'Ambiente (ENEA) acting as the administrative and financial coordinator of the FCTES<sup>QA</sup> project, and the Joint Research Centre (JRC) of the European Commission acting as the scientific coordinator of both projects would like to express their gratitude to the partners of both projects that have greatly contributed to the development of the testing procedure under the FCTESTNET thematic network and to the review of the procedure.

The funding by FP5 under contract # ENK5-CT-2002-20657 for FCTESTNET and by FP6 under contract # 020161 for FCTES<sup>QA</sup> is appreciated by the project partners.



European Commission

**EUR xxxxx EN – Joint Research Centre – Institute for Energy**

Title: Testing the voltage and the power as a function of the current density following an on/off profile versus time (Accelerated ageing on/off cycling test for a PEFC single cell). Test Module PEFC SC 5-4. Version 30 04 2010.

Author(s): T Malkow, G De Marco, A Pilenga, M Honselaar, G Tsotridis, S Escibano, L Antoni, R Reissner, O Thalau, E Sitters, G Heinz

Luxembourg: Office for Official Publications of the European Union

2010 – 34 pp. – 21 x 29.7 cm

EUR – Scientific and Technical Research series – ISSN xxxx-xxxx

ISBN xxx-xx-xx-xxxxx-x

DOI xx.xxxx/xxxxx

**Abstract**

This report contains the Test Module TM PEFC SC 5-4 entitled “Testing the voltage and the power as a function of the current density following an on/off profile versus time (Accelerated ageing on/off cycling test for a PEFC single cell)”. The module is a general characterization method used in research and development of PEFC with no target application. It may be used as a baseline measure to qualify fuel cells and its components in any given application.

The Test Module was originally developed and compiled under the Research & Training Network (RTN) FCTESTNET (Fuel Cell Testing and Standardisation). This project was partly funded during 2003-2005 under contract # ENK5-CT-2002-20657 by the 5th European Community Framework Programme on Research, Technological Development and Demonstration (FP5).

However, the present version of the Test Module is the result of a review undertaken in the frame of the FCTES<sup>QA</sup> (Fuel Cell Systems Testing, Safety & Quality Assurance) Specific Targeted Research Project (STREP). This project started in April 2006 with funding provide in part under contract # 020161 by FP6. The Test Module is subject to an experimental validation by means of a Round Robin Testing campaign conducted on PEFC by the partners participating in Work Package 2 of FCTES<sup>QA</sup>.



### **How to obtain EU publications**

Our priced publications are available from EU Bookshop (<http://bookshop.europa.eu>), where you can place an order with the sales agent of your choice.

The Publications Office has a worldwide network of sales agents. You can obtain their contact details by sending a fax to (352) 29 29-42758.

The mission of the JRC is to provide customer-driven scientific and technical support for the conception, development, implementation and monitoring of EU policies. As a service of the European Commission, the JRC functions as a reference centre of science and technology for the Union. Close to the policy-making process, it serves the common interest of the Member States, while being independent of special interests, whether private or national.



LD-NA-24126-EN-C

ISBN 978-92-79-14613-8



9 789279 146138